 





UR-290

Dual Channel Diversity Wireless Microphone

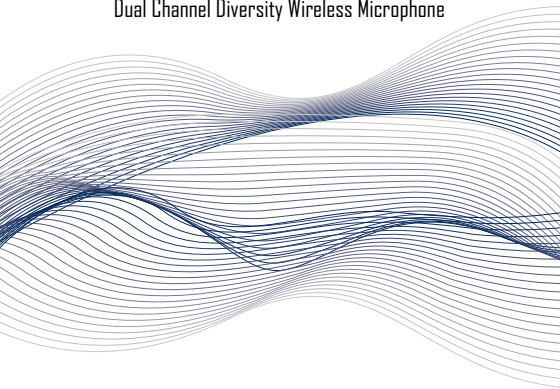

Quick Use Guide

 
UR-290 Wireless Receiver

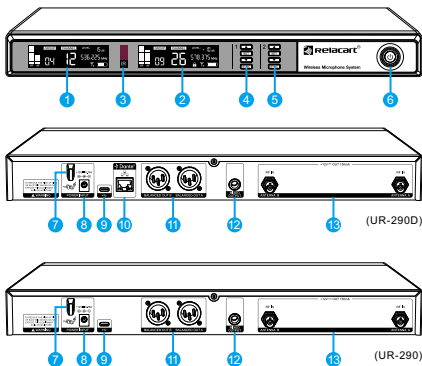


- | | |
|----------------------|------------------------------------|
| 1 CH1 Display | 7 Anti cable-pulling loop |
| 2 CH2 Display | 8 DC power input socket |
| 3 iR Sync window | 9 USB audio/software control port |
| 4 CH1 Control button | 10 Dante network port (UR-290D) |
| 5 CH2 Control button | 11 Audio output (balanced) |
| 6 Power switch | 12 Mixed audio output (unbalanced) |
| | 13 BNC antenna input port |

UH-280 Wireless Handheld Microphone

 - 1 Microphone pickup module
- 2 Display
- 3 Microphone handle
- 4 iR Sync window
- 5 Select button
- 6 Set button
- 7 Power switch
- 8 Charging contacts
- 9 Battery compartment

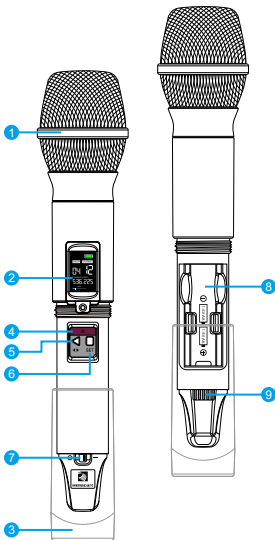





UT-280 Wireless Bodypack Microphone

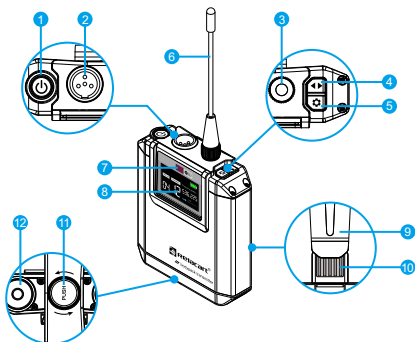 

- | | |
|-------------------------------|-----------------------|
| ❶ Power switch | ❷ iR Sync window |
| ❸ Audio input socket | ❸ Display |
| ❹ Antenna output socket (SMA) | ❹ Clamp |
| ❺ Select button | ❺ Charging contacts |
| ❻ Set button | ❻ Battery switch |
| ❼ TX antenna | ❼ Battery compartment |

RC-2 Charging stand (Optional)

    
- ① Power indicator light
- ② Charging status indicator light
- ③ Charging cabin
- ④ Charging dock level connection port
- ⑤ Charging dock connection accessory slot
- ⑥ Charging dock connector
- ⑦ DC IN power socket
- ⑧ Reset hole

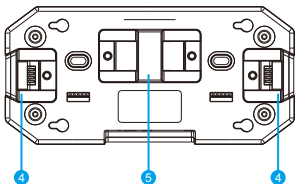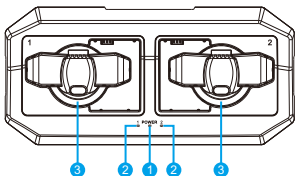


Charging stand usage

When charging, put the transmitter with the Ni-MH rechargeable battery installed into the charging compartment, as shown in the figure. (It cannot be charged if non-rechargeable batteries are installed.)


 
LED lights up to indicate battery status




	Status	Indicator
1/2 Charging dock	Charging	Red slow flashing
	Charging completed	Green
	Error/Abnormal	Red fast flashing
Power	Power supply is normally connected	Red

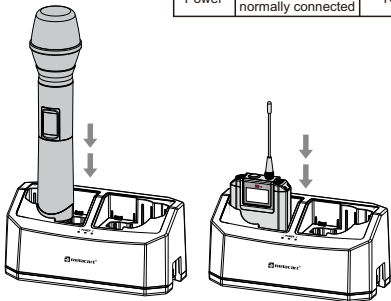 

BNC Wireless Installation

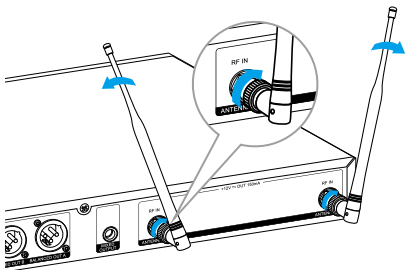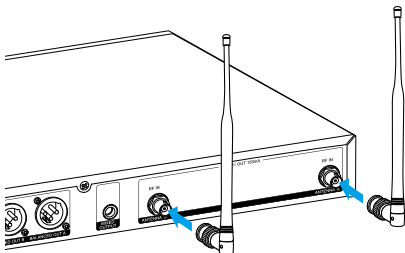  



Connect the Power Adapter

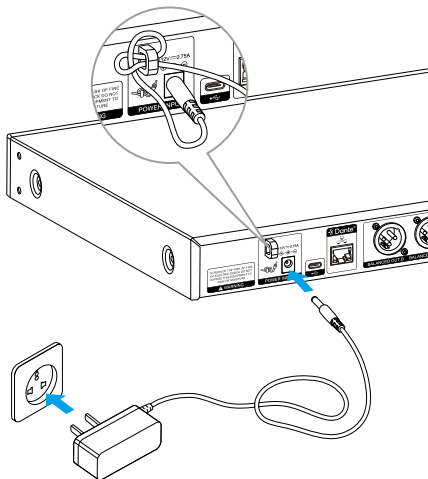 


Use a power adapter that complies with local regulations

  Connect the Audio Output

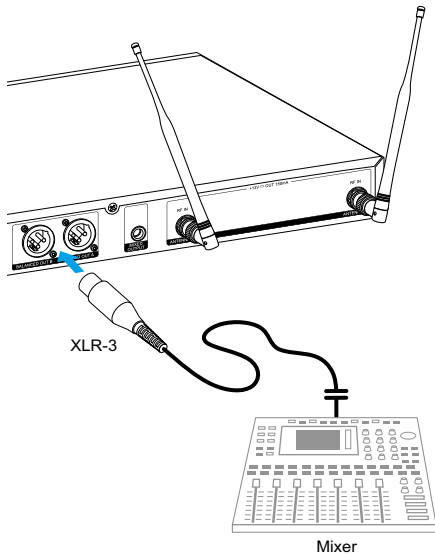

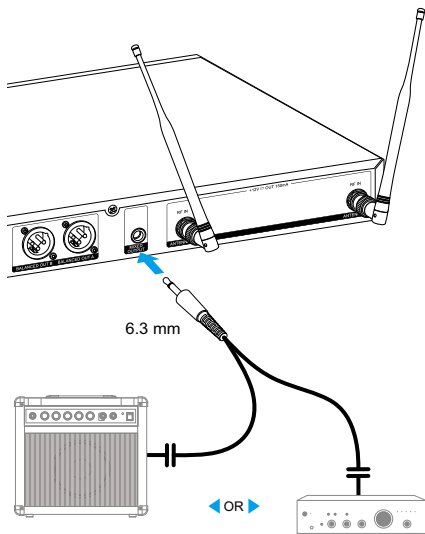


Transmitter Battery Installation

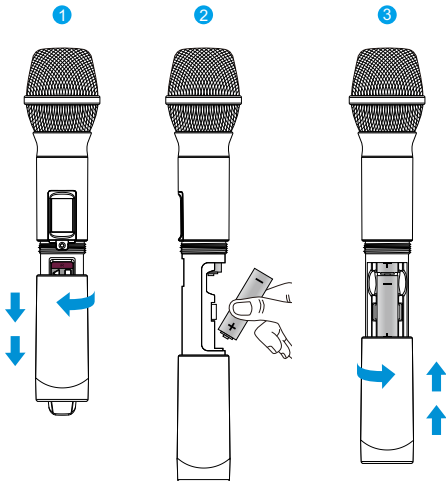 


AA battery*2 pcs
(Note the polarity marks)

 
- 1 Press "PUSH" while turning the battery door counterclockwise

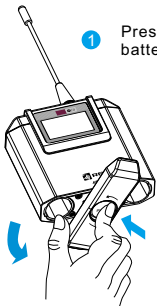

3


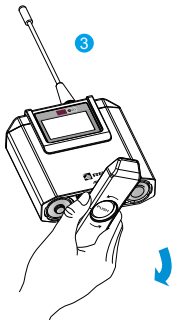 


2

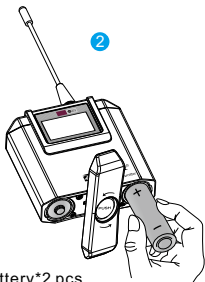 



AA battery*2 pcs
(Note the polarity marks)

 
 
Display

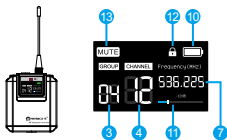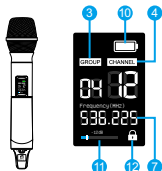

- 1 RF signal
- 2 Audio output signal
- 3 Frequency group
- 4 Channel
- 5 Volume level
- 6 RF squelch threshold
- 7 Frequency
- 8 Receiver keyboard lock
- 9 RF antenna status
- 10 Battery level
- 11 Input gain
- 12 Transmitter keyboard lock
- 13 Mute mode

    Operation Menu

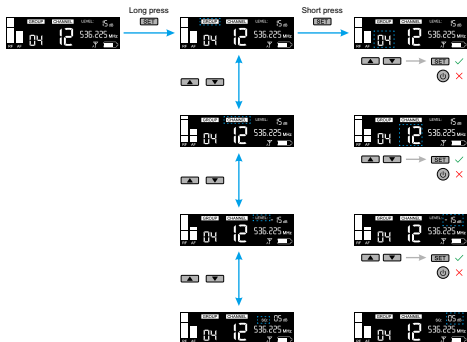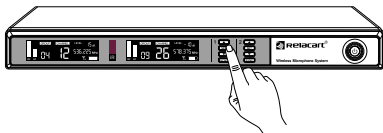

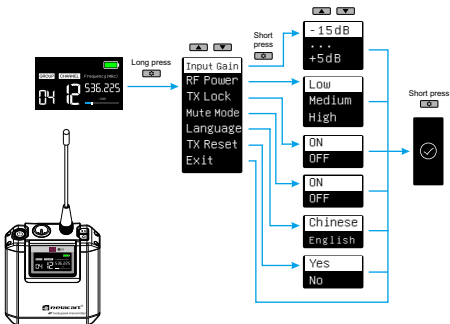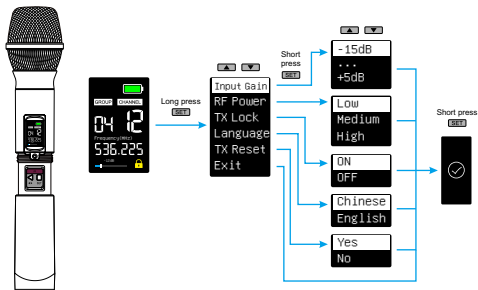


ON/OFF

UR-290/UR-290D




 
Short press [ON]
Long press [OFF]



UH-280



  Short press [ON]
Long press [OFF]

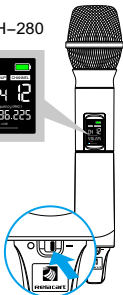


OFF ↔ ON

UT-280

AFS Automatic Frequency Search

 Long press [▲]

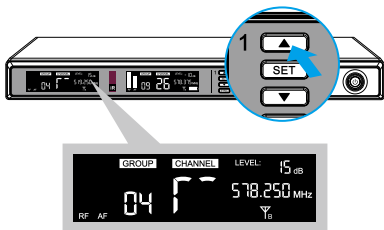


When searching for a channel, the frequency changes simultaneously according to the channel.



0 grid on the RF indicates the frequency is clean.
If not, please repeat this operation.

 SYNC Frequency Synchronization

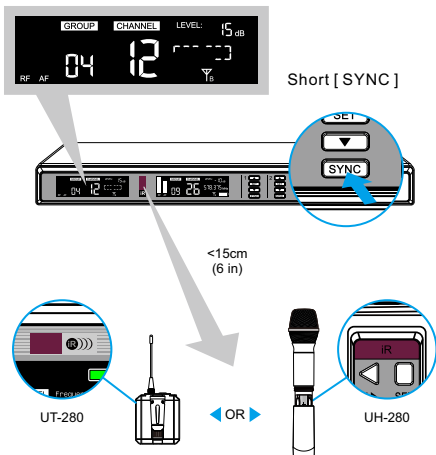

Note: When iR infrared binding, the handle of the handheld microphone must be unscrewed. Otherwise, the binding function will be affected.



UT-280

◀ OR ▶

 
 
 


UH-280


Both receiver and transmitter display
are in the same frequency

The usage of the transmitter

UH-280

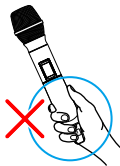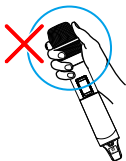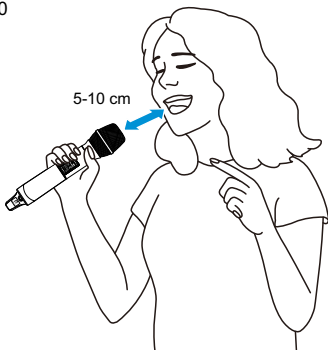

UT-280

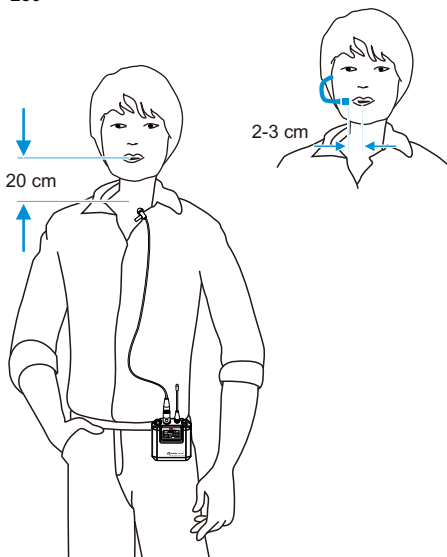 



www.relacart.com



Learn more



Product specification